

INTEX® OWNER'S MANUAL

FastFill™ Electric Pump

Model AP620DA 220V – 240V ~ 50Hz 100W

IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL INSTRUCTIONS BEFORE USING THIS PRODUCT

WARNING

- **NEVER PLACE AN INFANT TO SLEEP ON AIR MATTRESSES.**
- Never introduce any flammable substance into the inflatable air bed, SUCH AS AEROSOL TIRE REPAIR PRODUCTS, as it may ignite or explode.
- This is not a toy. Children must not be left unattended when using the air bed.
- Keep the storage bag (if included) away from babies and children. The storage bag is not a toy. When not in use, fold the bag and put it away out of the reach of children.
- Do not walk, stand on or jump on or use the air bed as a trampoline.
- Only for domestic use. Only for indoor use. Do not use on or near water. This is not a raft.
- Do not set up bed near stairs, doors, sharp edges or breakable objects. Provide adequate space between bed and objects to avoid entrapment.
- Make sure the area is flat, smooth, even and free of sharp objects that could puncture the bed.
- Keep pets away from the air bed. Pets may puncture the surface of the bed.
- Avoid sleeping on the edge of the air bed. Edges produce less support than the middle of the bed.
- Do not operate air pump for more than 5 minutes at a time. Let pump cool at least 15 minutes between use.
- Unplug electrical power cord when not in use.
- Do not obstruct the air passage opening or insert any objects into the air passage opening.
- If the AC supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified persons in order to avoid a hazard.
- To reduce the risk of electric shock, do not expose to rain. Store indoors.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

FOLLOW THESE RULES AND ALL INSTRUCTIONS TO AVOID SUFFOCATION, PROPERTY DAMAGE, ELECTRIC SHOCK, BURNS OR OTHER INJURY.

 
SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

General

- The air pump can also be controlled via the Intex Air Mattress Remote App from your mobile device, see "Intex Air Mattress Remote App" section for details.
- The USB power socket is suitable for charging mobile devices such as smartphones and tablets. Output rating: 5 V $\overline{\text{---}}$, 2.0 A.
- Air beds are designed for temporary use and are NOT designed to be a replacement for a traditional mattress.
- Make sure the area is flat, level, clean and free from sharp objects, and within reach of an electrical outlet.
- The appliance must be positioned so that the plug is accessible.
- To prevent puncture or damage to the air bed, never drag the air bed across the floor. Lift the inflated air bed when moving or changing location.
- No air pump maintenance is required.
- For cleaning use only clean cloth with mild soapy solution. Do not use any chemicals.
- In case of repairs, use only common PVC repair glue and patches. A repair patch/kit has been included with the product to repair small leak and holes. Refer to the instructions on the back of the repair patch/kit.

PARTS REFERENCE

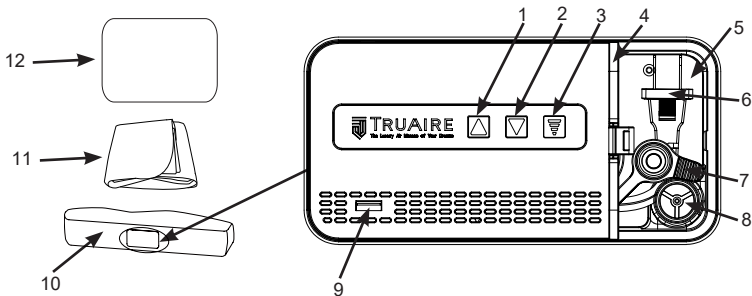

Part Descriptions:

- | | |
|---|---|
| 1. Inflation button (\triangle) | 7. Manual inflation port cap |
| 2. Deflation button (\square) | 8. Manual inflation port |
| 3. Deflation adjustment button (\cup) | 9. USB power socket (5 V $\overline{\text{---}}$, 2.0 A) |
| 4. Cord compartment cover | 10. Air bed front |
| 5. Cord compartment | 11. Air bed cover |
| 6. AC line cord | 12. Foam core |

NOTE: Drawings for illustration purpose only. May not reflect actual product. Not to scale. Due to a policy of continuous product improvement, Intex reserves the right to change specifications and appearance, which may result in updates to the instruction manual, without notice.

SAVE THESE INSTRUCTIONS

INFLATION

1. Open cord compartment cover and remove power cord. See Fig (1).

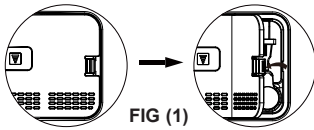


FIG (1)

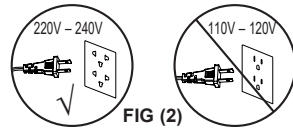




FIG (2)

2. Plug in the AC power cord into an AC electrical outlet. See Fig (2).
3. Press the inflation button () to inflate. See Fig (3).
4. When the air bed is inflated to the desired firmness, press “  ” again to switch OFF.

Note: The pump will automatically switch OFF after about five and half minutes of operation when the pump is left unattended or when air bed is fully inflated.




FIG (3)






FIG (4)



FIG (5)

5. Lie down on the air bed to test the firmness.
6. If the air bed feels too firm, adjust the firmness by pressing the deflation button () to deflate. See Fig (4).

NOTE: This will start deflating the air bed quickly, press “  ” again to switch OFF after a second or so. Test the firmness and repeat for a second at a time until you have reached the desired firmness.

Alternatively, you can do this process by pressing the deflation adjust button “  ”, which will allow air to be released slowly and short. See Fig (5). It will automatically return to the closed state after completion, press “  ” again to repeat deflating until the air bed reaches the desired firmness.

IMPORTANT NOTE


Proper inflation of the air bed.


The ambient temperatures of air have an effect on the air bed internal pressure. At low ambient temperature the air will contract within the air bed and the air bed will feel softer: add air as necessary. At high ambient temperature the air within the air bed will expand significantly and the air bed will become hard and may burst: release air to avoid damage to the air bed or to soften the feel. Do not expose the air bed to extreme temperatures (hot or cold). Stretching is a natural characteristic of new vinyl. During initial use, the air bed may become soft and require additional inflation to maintain desired firmness. This is normal for the first few days of use. Dimensions shown are approximate and will vary due to the vinyl temperature and the air temperature.


In no event shall Intex, their authorized agents or employees be liable for damages (such as pin holes) to the air bed caused by negligence, ordinary wear and tear, abuse and carelessness, or external forces.

SAVE THESE INSTRUCTIONS

DEFLATION

1. Plug in the AC power cord into an AC electrical outlet. See Fig (2).
2. Press the deflation button () to deflate. See Fig (6).

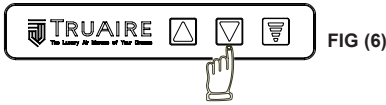


3. When all the air is removed from the air bed, press “  ” again to switch OFF.
Note: The pump will automatically switch OFF after about five and half minutes of operation when the pump is left unattended.
4. With the air bed fully deflated begin rolling the air bed from the end opposite of the pump towards the end where the pump is located. See Fig (7).
5. Disconnect the AC power cord from the electrical outlet, coil the line cord and place it inside the cord compartment, then close the cover. Make sure the power cord is free of twists, kinks or knots.

MANUAL INFLATION OPTION

If electrical power is not available, a conventional foot, manual, or battery-operated air pump can be used by connecting it to the manual inflation port located inside the line cord compartment. See Fig (8). Follow these steps:

1. Open line cord compartment cover.
2. Remove the cap from the manual inflation port and insert the nozzle of the pump into the port. Inflate the air bed to desired firmness.

NOTE: Do not overinflate. The firmness should be approximately the same as the level achieved with the internal electric pump.

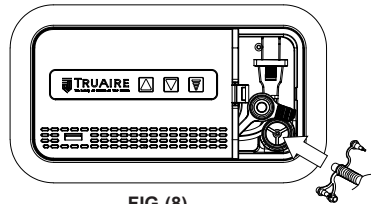

3. Remove nozzle from manual inflation port and close the cap and the line cord cover.

STORAGE INSTRUCTIONS

1. Deflate the air bed following the “DEFLATION” instructions.
2. Make sure the air bed is clean and dry.
3. Lay the air bed flat with the sleeping surface facing upwards and follow the folding steps on Figs (9 - 13). Fold the air bed loosely and avoid sharp bends, corners and creases which can damage the air bed.



FIG (9)



FIG (10)



FIG (11)

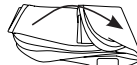


FIG (12)



FIG (13)

4. Place the air bed inside the storage bag and store in a dry place.

SAVE THESE INSTRUCTIONS

Intex® Air Mattress Remote App Setup User Guide



APP QR Code

The App allows you to operate and control the electric air pump via Bluetooth from a mobile device. Follow below steps to install and use the App:

- 1) Activate the Bluetooth function on the mobile device and ensure the air pump is plugged into an electrical outlet and the interface panel light is on. **NOTE:** Keep the mobile device within 5m (16ft) range of the air bed to ensure good signal and connectivity.
- 2) Scan the App QR code located on the pump panel or on this manual to install the App. You may also download the "Intex Air Mattress Remote App" from your App store.
- 3) Open the App and select the air bed to be connected from the "Add Product" list. Tap on the air bed name to rename it for easy identification. You can only connect to one air bed at a time.

NOTE: On mobile devices with older operating system, you may be prompted to allow the App to access your device's location and information. If so, please allow the app to access the location and information of the device in order to achieve a successful connection between the device and the electric air pump of the air bed.

- 4) App control interface operation:
 - **INFLATE (^):** Touch this button to activate the inflation function. When the inflation is completed, touch the " □ " button to stop the pump.
 - **STOP (□):** Touch this button to stop the pump at any time.
 - **ADJUST (∨):** Touch this button to release a small and short amount of air at a time.
 - **DEFLATE (v):** Touch this button to activate the deflation function. When the deflation is completed, touch the " □ " button to stop the pump.

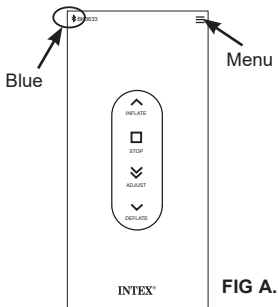


FIG A.

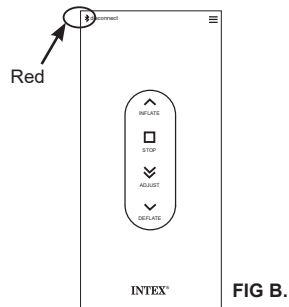


FIG B.

1. Touch the menu icon on the top right corner and select language to change the App control interface language. See Fig A.
2. A blue Bluetooth icon means a successful connection, while a red icon means a failed connection. See Fig A - B. Refer to the "App Troubleshooting" section for details.

SAVE THESE INSTRUCTIONS

APP TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Bluetooth connection failed	<ul style="list-style-type: none"> • Mobile device Bluetooth not activated. • Out of range. • The pump is not powered on. • The connected Bluetooth is not the current pump Bluetooth. 	<ul style="list-style-type: none"> • Activate the Bluetooth function on the mobile device. • Make sure the mobile device is within 5 m (16 ft) of the product to be connected. • Make sure the pump is powered on. • Make sure that the pump Bluetooth connection correspond to the pump on the air bed to be connected with. • Close the App, re-launch the App and try to connect the air bed with your mobile device again.
App does not work or respond	<ul style="list-style-type: none"> • The App does not load. 	<ul style="list-style-type: none"> • Force-quit the App, re-launch the App and try to connect the air bed with your mobile device again. • Uninstall the App and reinstall it again.
App failed to access the device's location to finish the pairing	<ul style="list-style-type: none"> • Incompatible mobile devices operating system (Android devices only). 	<ul style="list-style-type: none"> • Ensure the right version of operating system (Android devices only): <ul style="list-style-type: none"> a. For all the Apple devices regardless of the version of operating system, <u>NO need to turn on the device's location to finish the pairing.</u> b. For the Android devices, only 6.0 and greater is required for app to access the device's location to finish the pairing.



The full text of the EU declaration of conformity is available at the following internet address https://www.intexdevelopment.com/support/doc?lst_lang=2

Hereby, Intex Development Company Limited, declares that this AP620DA is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

SAVE THESE INSTRUCTIONS

Installing the foam core into the air bed cover

1. Make sure the air bed is inflated to the desired firmness first. See Fig (14).
2. Unwrap the foam core and let it rest for 5 minutes.
3. Unfold the air bed cover and flip the cover inside out so that the foam compartment is facing outside. See Fig (15).
4. With the foam compartment facing outside, install the cover in this way over the inflated air bed. See Fig (16).
5. Unzip the foam compartment, insert the foam core into the compartment and close the zipper. **NOTE: make sure the blue color (soft) side is face the sleeping surface side of the cover, the side in contact with the user body.** See Fig (17-22).
6. Remove the cover from the air bed.
7. Reinstall the cover back to the air bed with foam compartment inside facing the air bed. See Fig (23-25).

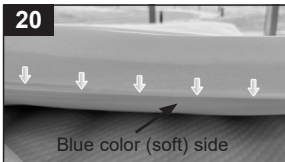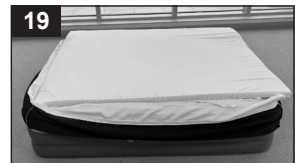

©2025 Intex Marketing Ltd. - Intex Development Co. Ltd. - Intex Recreation Corp. All rights reserved/Tous droits réservés/Todos los derechos reservados/Alle Rechte vorbehalten. Printed in China/Imprimé en Chine/Impreso en China/Gedruckt in China.

®™ Trademarks used in some countries of the world under license from®™ Marques utilisées dans certains pays sous licence de/Marcas registradas utilizadas en algunos países del mundo bajo licencia de/Warenzeichen verwendet in einigen Ländern der Welt in Lizenz von/Intex Marketing Ltd. to/a/an Intex Development Co. Ltd., Hong Kong & Intex Recreation Corp., P.O. Box 1440, Long Beach, CA 90801 • Distributed in the European Union by/ Distribué dans l'Union Européenne par/Distribuido en la unión Europea por/Vertrieb in der Europäischen Union durch/Intex Trading B.V., Ettenseweg 46, 4706 PB Roosendaal - The Netherlands • Distributed in the UK by Intex Service (UK) Limited, 124 City Road, London, EC1V 2NX, UK.
www.intexcorp.com

INTEX®

SAVE THESE INSTRUCTIONS